


Your Remarkable Creators Bundle will arrive in seven pieces:

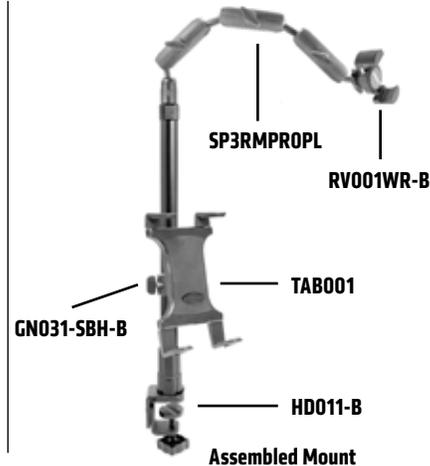


Telescoping pole extends upward from 17 inches to 29 inches.


**Compatibility:**  
Fits smartphones with cases weighing up to 2 pounds and measuring up to 4" wide.

**IMPORTANT:**  
Do not overtighten ring. Overtightening may damage threads on holder and also make it difficult to adjust phone and tablet holders.


**1a** Attach mount to surface by tightening C-clamp knob. Slide optional rubber clamp boot onto the top of the mount's clamp to prevent scratching clamp surface if desired.

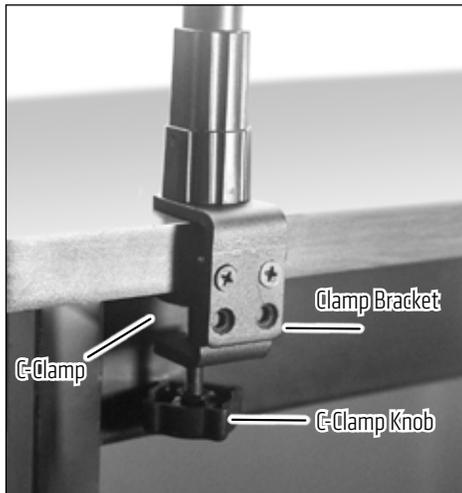


**1b** For thicker tables or desks, adjust the clamp bracket by using a Phillips screwdriver to remove the screws from the top position and move them to the bottom position.

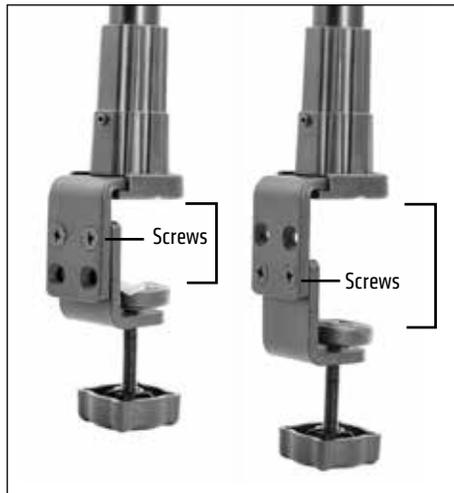

**2** Attach overhead arm assembly to clamp pedestal by unscrewing the collar at the top of the pole until the metal ball side of the overhead arm assembly fits into the collar. Tighten collar clockwise to secure.

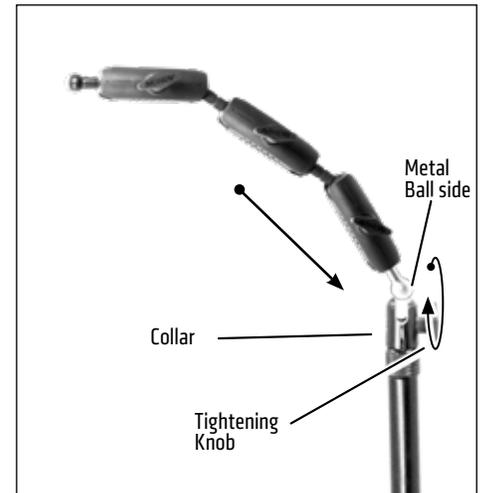


**3** Unscrew tightening ring from holder. Place ring over the 17mm end of mount then snap the holder onto the ball. Set to desired position, then tighten ring.

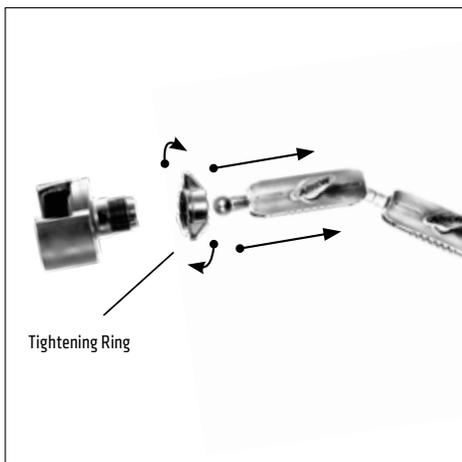

**4** Using two hands, insert phone into the holder by pushing the device into one of the spring-loaded support arms. Expand the other support arm and fully insert device until it lays flat against the blue rubber pad.



**5** Shafts can be adjusted by unscrewing the shafts' knobs to loosen. Tighten knobs to set.

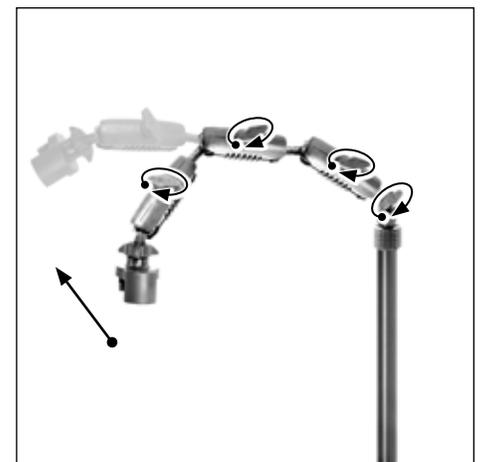

- 6 Adjust the height of the pole by loosening the adjustment collar counterclockwise. Tighten clockwise to set height.



- 8 Unscrew mount's knob to loosen grip. Place mount around pole and tighten knob to secure.



- 10 Push down on lower legs of spring-loaded holder to insert tablet.



- 7 For instructions on how to assemble tablet holder, refer to included TAB001 manual. Attach tablet holder by inserting the mount's Dual T-Tabs into the holder's Dual T-Slots.




- 9 Attach short, medium or long support legs to the tablet holder based on the size of your device.



**OPTIONAL**

To attach optional camera/pico projector adapter, unscrew shaft knob and remove phone holder, ring, and ball adapter. Attach the 25mm ball end of the camera adapter to the shaft and tighten clockwise to secure.

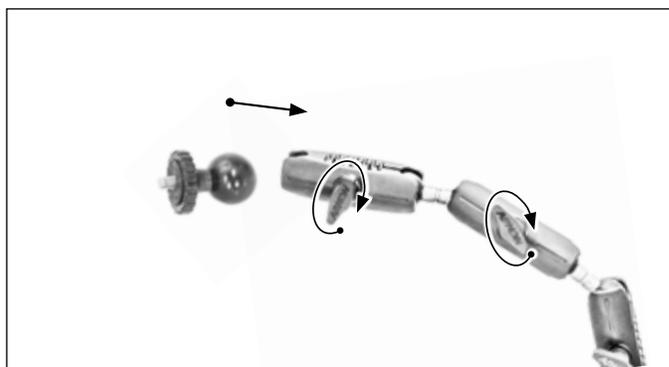

**! Safety Precautions**  
 Arkon Resources, Inc. is not responsible for any damages caused to your device or yourself due to the installation or use of this mount.

**ARKON MOUNTS**

Consumer Hotline:  
 USA (800) 841-0884  
 INT'L (626) 254-9005  
 Monday - Friday 9 am - 5 pm, PST

www.arkon.com  
 Arcadia, CA 91006 USA  
 Designed in USA | Made in Taiwan and USA  
 © Copyright 2018 Arkon Resources, Inc.