



Package Contents:



- (1) CMPTRIXL-B – Flexible 11" Tripod
- (1) MG002 – Mobile Grip 2 Universal Smartphone Holder
- (1) AP142017MM – 1/4"-20 Camera Pattern to 17mm Ball Adapter
- (1) SP-SB-RING – Swivel Tightening Ring
- (1) CAMPOUCHXL – Carrying Bag

Device Compatibility:

Medium to large digital cameras with a standard 1/4"-20 camera pattern, including Nikon D610, D7100, D5300, Canon Rebel T3i, 6D, 70D, Pentax K3, K-5 IIs, Sony A77 II, Fujifilm X-T1 and others.



Using With Digital Camera:

- 1 Attach camera by screwing it onto the 1/4"-20 mounting bolt.
- 2 Loosen the adjustment knob to change position and retighten to set.
- 3 Release the 1/4"-20 mount by unscrewing lateral screw and pressing on release tab.

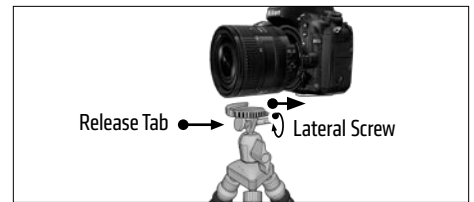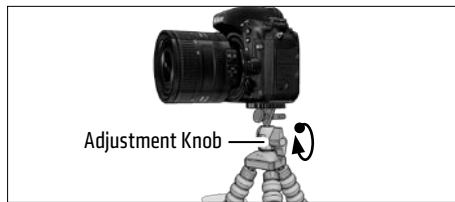




Using the Mobile Grip 2 Universal Holder:

- 1 Screw end of Mobile Grip 2 Universal Holder directly onto the 1/4"-20 mounting bolt.
- 2 Insert device and adjust as needed.

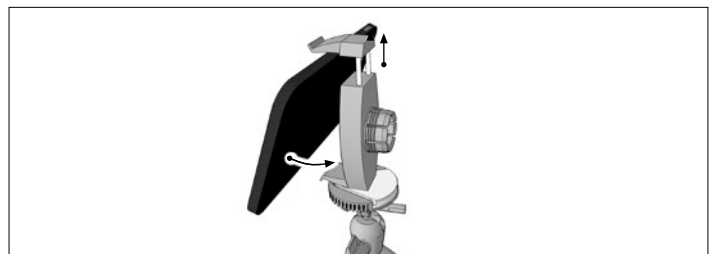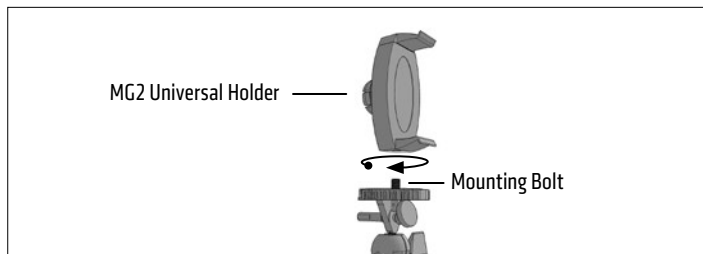

Using the 17mm Ball Adapter with the Mobile Grip 2 Universal Holder:

- 1 Screw 17mm Ball Adapter onto the 1/4"-20 mounting bolt.
- 2 Place tightening ring over the adapter mount ball and snap Mobile Grip 2 Universal Holder onto the adapter mount.
- 3 Insert device and tighten ring to set position.

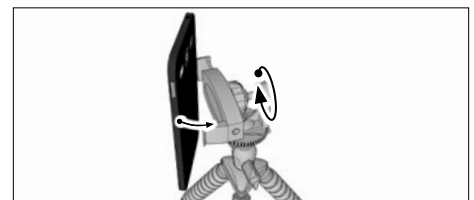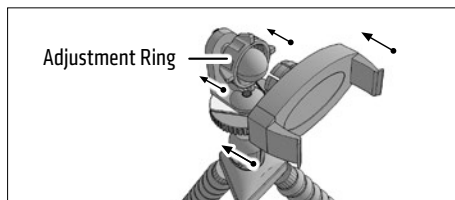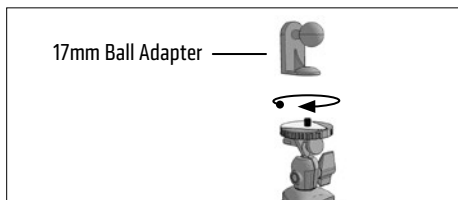

! Safety Precautions

Arkon is not responsible for any damages caused to your device or yourself due to the installation or use of the mount.



The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China

© Copyright 2016 Arkon Resources, Inc.