



APTTGO520

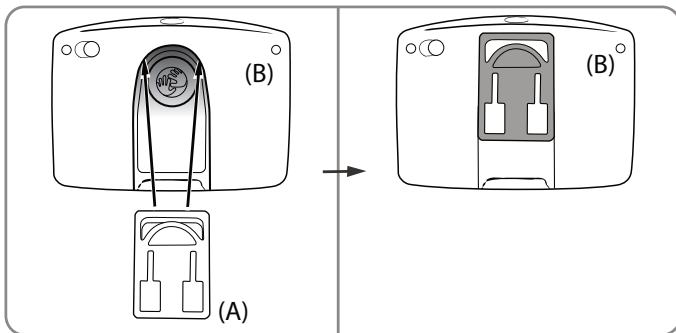

Adapter Plate Attachment

Step 1. Attach the adapter plate (A) by sliding it up into the slot on the back of the Tomtom GO 520 or GO 720 device (B) as shown left.

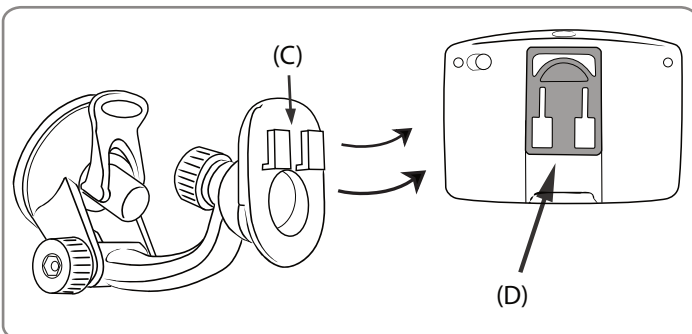

Attachment to Pedestal
(Pedestal Sold Separately)

Step 1. Attach the pedestal to the Tomtom GO 520 or GO 720 device by inserting the dual-T tabs (C) into the dual-T slots of the adapter plate (D).

! Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.



The Mobile Mounting Specialists™

Consumer Hotline:

(USA) (800) 841-0884

(INT'L) (626) 254-9005

Mon-Fri. 9am-5pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.