




APTTO


Adapter Plate Attachment

Step 1. Slide the adapter plate (A) up into the grooves on the back of the TomTom One GPS device (B).

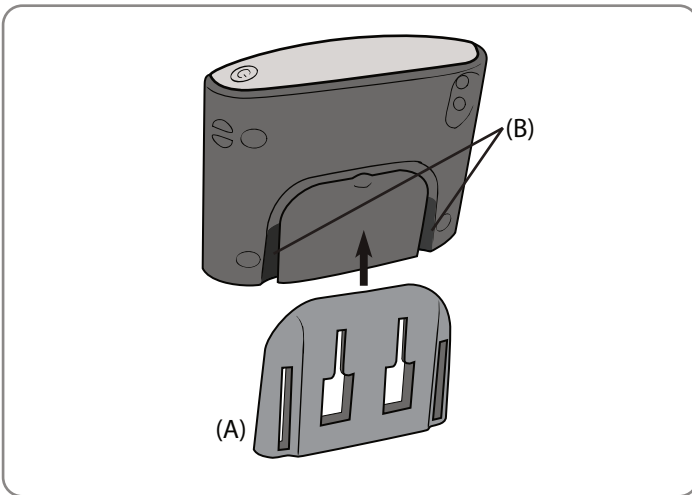

Attachment to Pedestal
(Pedestal Sold Separately)

Step 1. Attach the pedestal to the Tomtom One device by inserting the dual-T tabs (C) into the dual-T slots of the adapter plate (D).

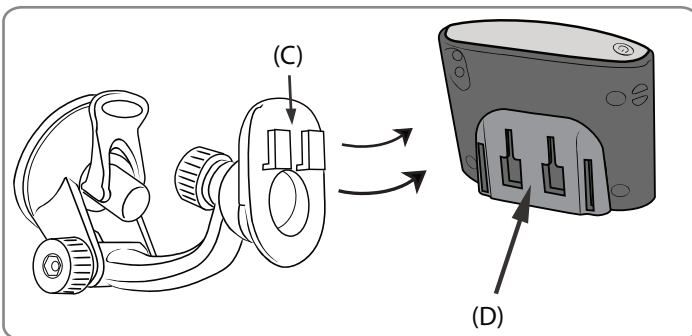

! Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.



The Mobile Mounting Specialists™

Consumer Hotline:
(USA) (800) 841-0884
(INT'L) (626) 254-9005
Mon-Fri. 9am-5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.