

BB229-SRVC



CM047-S-2




CC001-BB

Compatible with the following Blackberry phones:

7100t, 7230, 7250, 7280, 7290, 7270 (enterprise solution), 7510, 7520, 6230, 8700r, 8700c, Cingular 7100g, Cingular 8700c


Not Compatible with the following:

T-Mobile 7105t, Nextel 7100i, Sprint 7130

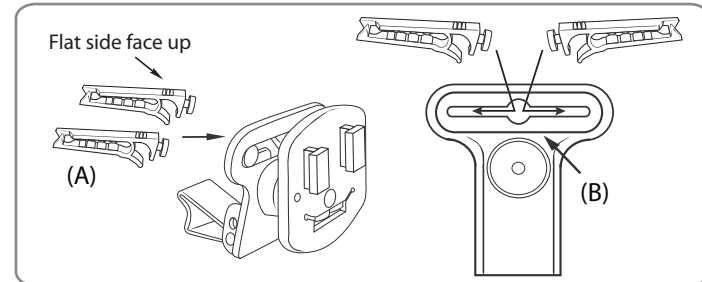

Pedestal Assembly

Step 1. Attach the vent mounting clips (A) to the back of the pedestal (B) with the vent clips positioned with the flat sides facing up.

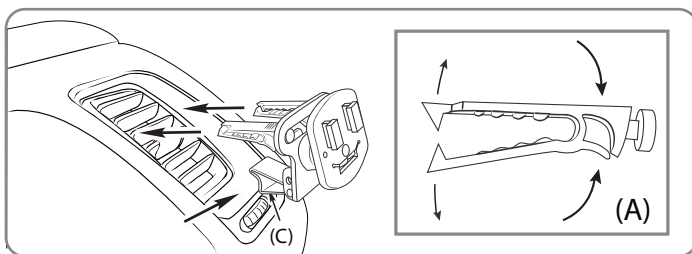


Insertion of Pedestal into the Air Vent

Step 1. Pinch the vent mounting clips (A) so that the teeth open and gently insert vent pedestal into vent louvres until the mounting clips are attached to the fin/blade of the vent. Adjust the support leg (C) vertically until it rests firmly along the bottom of the vent or dash surface below the vent.

Safety Precautions


Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.

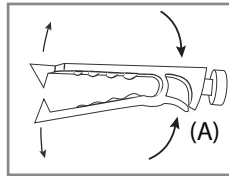

Pedestal Removal

Step 1. Remove the device from the vent mount assembly.
Step 2. Pinch the vent clips (A) so that the teeth open and carefully slide the pedestal from the vent/blade. Make sure the teeth of the vent clips are open enough to not damage vent.

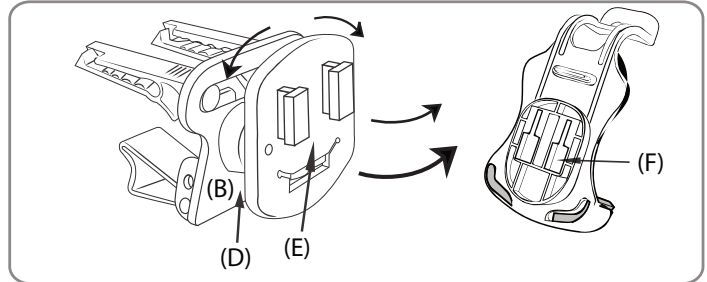


Pedestal Adjustment & Device Cradle Installation

Step 1. Adjust the swivel angle of the pedestal head by firmly holding the back of the pedestal (B), pulling out the pedestal head and twisting to the desired angle. Adjust the lateral angle of the pedestal head (E) by simply twisting the head on the pivot axis (D).



Use caution when adjusting the swivel movement to avoid damaging your air vents.

Step 2. Attach the device cradle to the pedestal by inserting the dual T-Tabs of the pedestal (E) into the T-slots of the cradle (F).

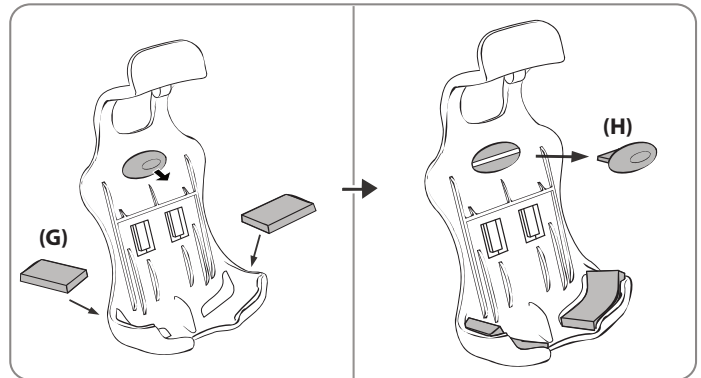

Blackberry Cradle Instructions

Step 1. If you are using a Blackberry 8700 series device, insert adhesive pads (G) at the pedestal base as shown so the device can fit securely.

Step 2. Remove spacer insert (H) to make more room for some devices that may use an extended battery pack.



The Mobile Mounting Specialists™

Consumer Hotline:
(USA) (800) 841-0884
(INT'L) (626) 254-9005
Mon-Fri. 9am-5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.