

BBBOLD125 | Floor or Console Mount for BlackBerry® Bold™ 9000



CM088-TS-2
15" Flexible Floor Mount



CC007-BOLD
Custom Cradle
for BlackBerry Bold

Patent Pending

Package Contents:

- (1) CM088-TS-2 - 15" Flexible steel gooseneck floor or console mount
- Includes: (1) Seat Bolt Bracket, (1) Floor / Console Bracket, (4) Screws, (4) Plastic Caps, and (1) Flexible Steel Shaft with Plastic Tubing
- (1) CC007-BOLD - Custom cradle for BlackBerry Bold


Required Tools for Installation:

1. Socket wrench
2. Drill and screwdriver for optional floor or console mounting

Compatible with:

- BlackBerry Bold 9000 smartphone


BlackBerry brand name and Bold product name are trademarks or registered trademarks of Research in Motion, Ltd. Arkon Resources, Inc. is not affiliated with Research in Motion, Ltd.

 Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

1 Passenger Seat Bolt Mounting


For a simple mount that can be easily moved to another vehicle, install using the passenger seat track bolt.

- Step 1. Screw the flexible steel shaft into the seat track bolt bracket.
- Step 2. With a socket wrench, loosen the passenger seat track bolt, insert the seat track bolt bracket, and retighten the seat track bolt.

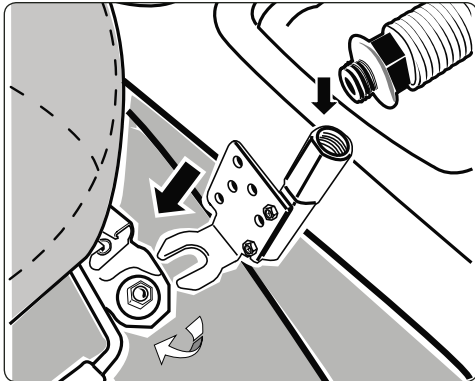


2 Floor or Console Mounting

For a more permanent mount, connect the Floor / Console Mount Bracket to the floor or console. This will require drilling into your vehicle's interior surface.

-  Drilling into the dash, floor, or console will permanently damage the vehicle. Use caution and consult a mobile install professional to avoid drilling into the gas tank, electrical system or other highly sensitive vehicle components.

Continued on next column...

- Step 1. Position the Floor / Console Bracket and drill into the floor or console.
- Step 2. Attach the Floor / Console Bracket with screws and cover with plastic caps.
- Step 3. Screw the steel shaft into the Floor / Console Bracket.

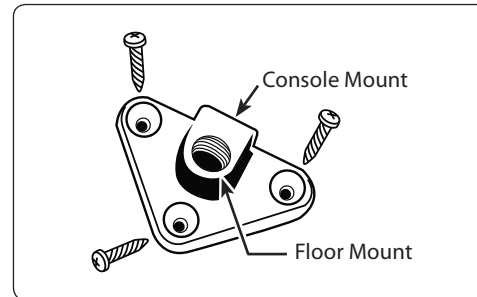


3 Pedestal Head Adjustments

- Step 1. Adjust the steel shaft by bending with both hands to the desired location of the male dual T head.

Use the adjustment knob and wing nut on the pedestal

- Step 2. head to swivel or rotate the head position if necessary.

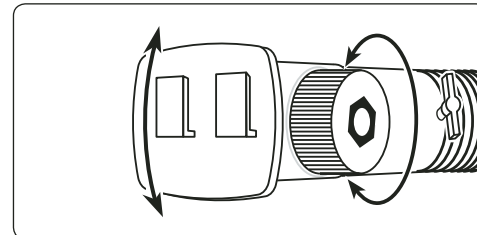

Continued on other side...

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com


Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan


© Copyright 2009 Arkon Resources, Inc.

4 Cradle Connection and Bold Insertion into Cradle

Step 1. Attach the dual T-slots (A) on the back of the Bold cradle to the dual T-tabs (B) on the floor mount pedestal head.

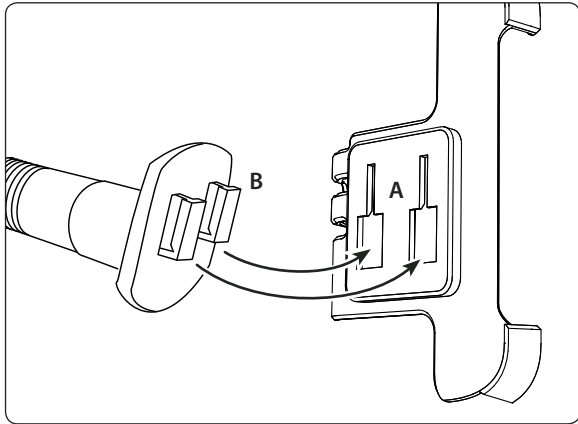

Step 2. Push and hold the right thumb tab (C) and gently insert the Bold device (not included, sold separately) into the cradle.

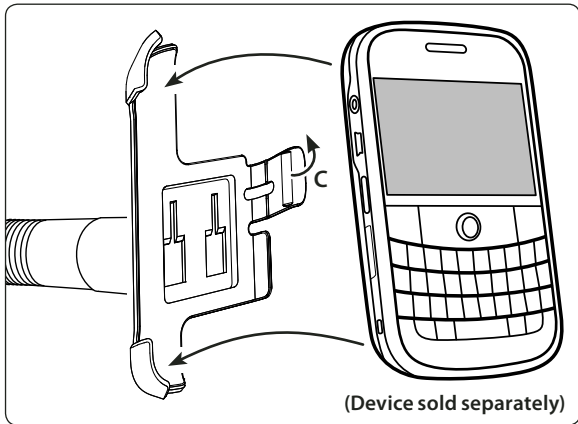

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and /or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan

© Copyright 2009 Arkon Resources, Inc.