

# BBSTORM129-SBH | Air Vent Swivel Mount for BlackBerry® Storm™



GN047-SBH  
Air Vent Mount with  
Swivel Ball Head

CC008-STORM  
Custom Cradle for  
BlackBerry Storm



Patent Pending

## Package Contents:

- (1) GN047-SBH - Removable air vent mount with dual T swivel ball head
- (1) CC008-STORM - Custom cradle for BlackBerry Storm

No tools required for installation.

## Compatible with:


- BlackBerry Storm smartphone



Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.


## Air Vent Mount Assembly

Step 1. Attach the vent mounting clips (A) to the back of the pedestal (B) with the vent clips positioned with the flat sides facing up.

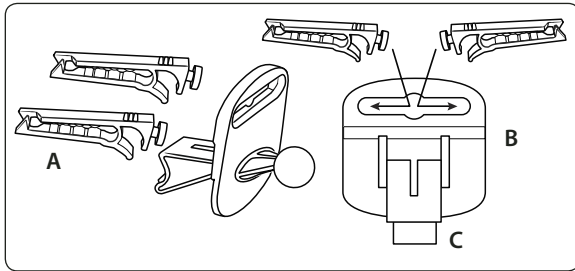

## Swivel Ball Head Assembly Attachment

Step 1. Slip the tightening ring (D) over the air vent mount ball. Snap the dual-T head adapter plate (E) on to the mounting ball (F). Screw the tightening ring over the adapter plate until securely holding the plate. Swivel to adjust the angle of the dual-T head.

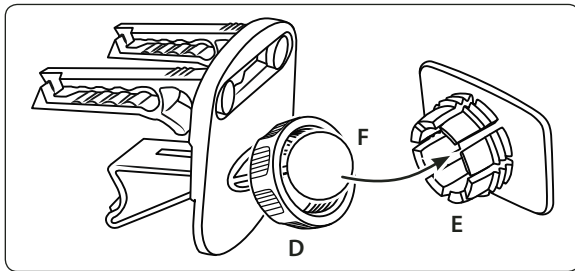

## Storm Cradle Attachment to Air Vent Mount and Insertion

Step 1. Attach the dual T-slots (G) on the back of the Storm cradle to the dual T-tabs (H) on the swivel mount head.

*Continued on next column...*


BlackBerry brand name and Storm product name are trademarks or registered trademarks of Research in Motion, Ltd. Arkon Resources, Inc. is not affiliated with Research in Motion, Ltd.




## Safety Precautions

Follow all manufacturer safety guidelines for operating your device. Failure to practice safe usage of GPS device while driving may result in damage, injury, or death.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

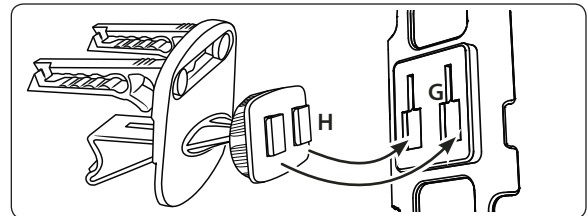


Step 2. Raise and hold the top catch (I) while gently inserting the Storm device (not included, sold separately) into the cradle.

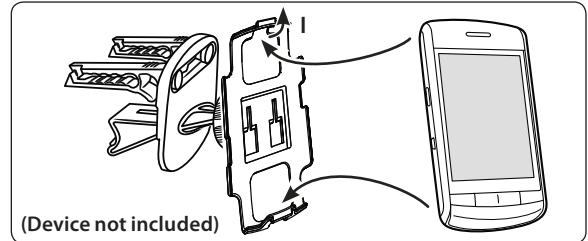

## Insertion of Mount Assembly and Storm into Air Vent

Step 1. Pinch the vent mounting clips (A) so that the teeth open and gently insert vent pedestal into vent louvres until the mounting clips are attached to the fin/blade of the vent. Adjust the support leg (C) vertically until it rests firmly along the bottom of the vent or dash surface below the vent.

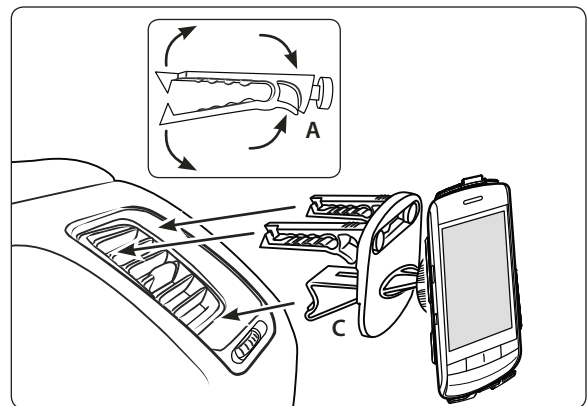

**ARKON®**  
RESOURCES INC. The Mobile Mounting Specialists™

Consumer Hotline:  
USA (800) 841-0884  
INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST © Copyright 2009 Arkon Resources, Inc.

[www.arkon.com](http://www.arkon.com)  
Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan