


CM083 | Lighter Socket Mounting Pedestal



CM083

Installation Instructions

- Step 1. Insert the lighter socket plug (A) completely into the vehicle's 12V / lighter socket.
- Step 2. Rotate the adjustment tightening ring (B) until the inserted end of the pedestal expands and is held securely in the 12V / lighter socket.
- Step 3. Using both hands, carefully bend the pedestal to desired angle.
- Step 4. Adjust the angle of the pedestal head (D) by tightening the wing nut (C) to the desired placement angle.
- Step 5. Insert the single T-tab of the pedestal head (D) into the single T-slot of any Arkon mount (not included, sold separately).

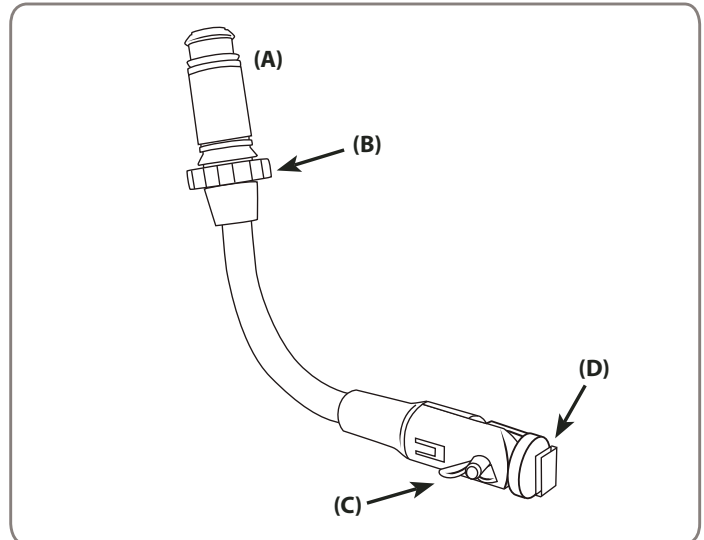

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this mounting solution.

ARKON[®]
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:
(USA) (800) 841-0884
(INT'L) (626) 254-9005
Mon. - Fri. 9am-5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in Taiwan
© Copyright 2008 Arkon Resources, Inc.