

# IPM125 | Flexible Gooseneck Seat Bolt or Floor Mount for Apple® iPhone™



## Package Contents:

- (1) CM088-TS-2 - 15" Flexible steel gooseneck floor or console mount  
Includes: (1) Seat Bolt Bracket, (1) Floor / Console Bracket, (4) Screws, (4) Plastic Caps, and (1) Flexible Steel Shaft with Plastic Tubing
- (1) CC005-IP - Custom cradle for Apple iPhone

## Required Tools for Installation:

1. Socket wrench
2. Drill and screwdriver for optional floor or console mounting

## Compatible with:


- Apple iPhone 3G and Original iPhone

Apple brand name and iPhone product name are trademarks or registered trademarks of Apple, Inc. Arkon Resources, Inc. is not affiliated with Apple, Inc.

## 1 Passenger Seat Bolt Mounting


For a simple mount that can be easily moved to another vehicle, install using the passenger seat track bolt.

- Step 1. Screw the flexible steel shaft into the seat track bolt bracket.
- Step 2. With a socket wrench, loosen the passenger seat track bolt, insert the seat track bolt bracket, and retighten the seat track bolt.

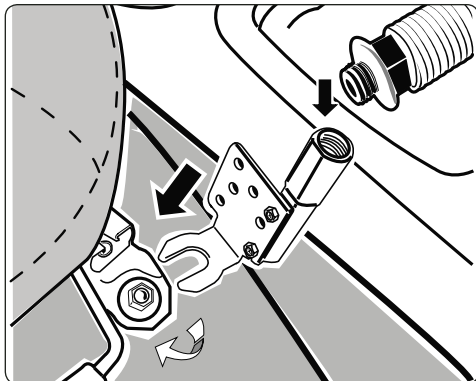


## 2 Floor or Console Mounting

For a more permanent mount, connect the Floor / Console Mount Bracket to the floor or console. This will require drilling into your vehicle's interior surface.

-  Drilling into the dash, floor, or console will permanently damage the vehicle. Use caution and consult a mobile install professional to avoid drilling into the gas tank, electrical system or other highly sensitive vehicle components.

*Continued on next column...*

- Step 1. Position the Floor / Console Bracket and drill into the floor or console.
- Step 2. Attach the Floor / Console Bracket with screws and cover with plastic caps.
- Step 3. Screw the steel shaft into the Floor / Console Bracket.

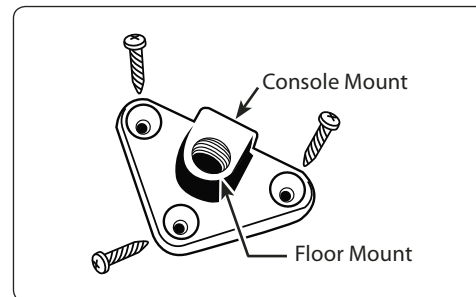


## 3 Pedestal Head Adjustments

- Step 1. Adjust the steel shaft by bending with both hands to the desired location of the male dual T head.

Use the adjustment knob and wing nut on the pedestal

- Step 2. head to swivel or rotate the head position if necessary.

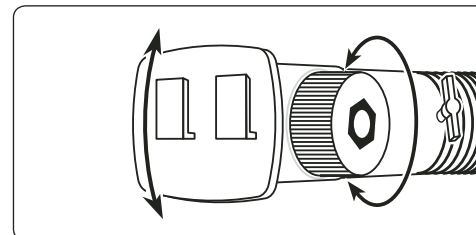

*Continued on other side...*

## Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
RESOURCES INC.

*The Mobile Mounting Specialists™*

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

[www.arkon.com](http://www.arkon.com)


Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan


© Copyright 2008 Arkon Resources, Inc.


#### 4 Cradle Connection and iPhone Insertion / Removal from Cradle

Step 1. Connect the dual T-slots (A) on the back of the iPhone cradle to the dual T-tabs (B) on the mount pedestal head.

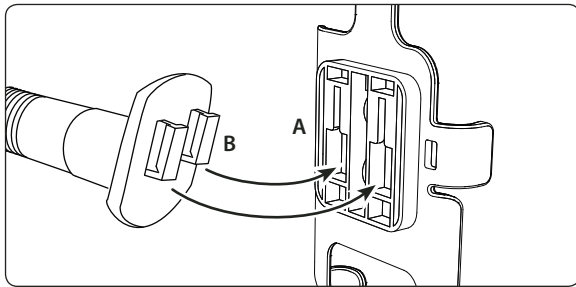

Step 2. Lift and hold the upper thumb tab (C) while gently lowering the iPhone device (not included, sold separately) into the cradle.

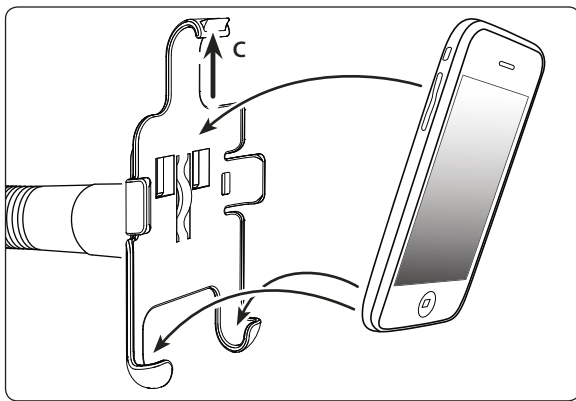

 Do not twist the cradle or iPhone device while mounted on top of the pedestal to adjust the steel shaft as this can break the dual T-grooves.



#### Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
**RESOURCES INC.**

*The Mobile Mounting Specialists™*

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

[www.arkon.com](http://www.arkon.com)

Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan

© Copyright 2008 Arkon Resources, Inc.