

MM329-SBH | Air Vent Swivel Mount for Magellan®, Mio®, and Navman® GPS



GN047-SBH
Air Vent Mount with
Swivel Ball Head


APMM300
Dual-T Adapter Plate

Package Contents:

- (1) GN047-SBH - Removable air vent mount with dual-T swivel ball head
- (1) APMM200 - Dual-T to pattern adapter plate


Compatible with:

- Magellan Maestro: 3100, 3140, 3200, 3210, 3220, 3225, 3250, 4000, 4010, 4040, 4050, 4210, 4215, 4200, 4220, 4245, 4250, 4350, 4370, 4700, 5310, and 5340
- Magellan RoadMate: 1200, 1210, 1212, 1215, 1220, 1230, 1340, 1400, 1412, 1430, 1440, 1470, 1475T, 2000, 2200T, 2250T, 300, 3000T, 3050T, 360, 500, 500 Plus, 6000T, 700, 760, 800, and 860T
- Magellan Triton: 1500, 200, 2000, 300, 400, and 500
- Magellan Crossover: GPS 2500T
- Mio Moov: 300, 301, 310, 330, 330 Europe, 360, 370 Europe, 380, 500, and Knight Rider Ed.
- Navman: S50, S50 3D, S70, S90i

 Use caution when adjusting the swivel movement to avoid damaging your air vents.


Air Vent Mount Assembly

Step 1. Attach the vent mounting clips (A) to the back of the pedestal (B) with the vent clips positioned with the flat sides facing up.

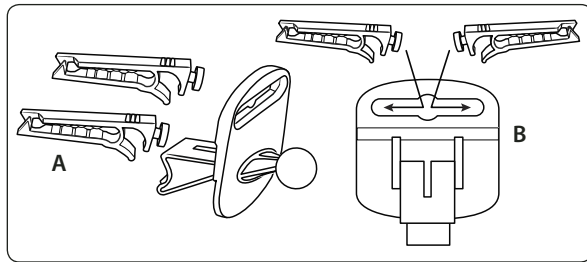


Swivel Ball Head Assembly Attachment

Step 1. Slip the tightening ring (C) over the air vent mount ball. Snap the dual-T head adapter plate (D) on to the mounting ball (E). Screw the tightening ring over the adapter plate until securely holding the plate. Swivel to adjust the angle of the dual-T head.

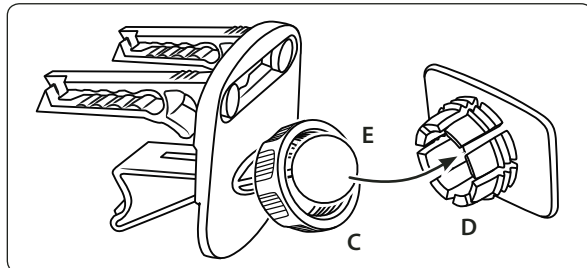

Adapter Plate Attachment

Step 1. Insert the power cord into the adapter plate base. Attach the dual T-tabs (F) on the swivel pedestal head into the dual T-slots (G) on the back of the adapter plate.

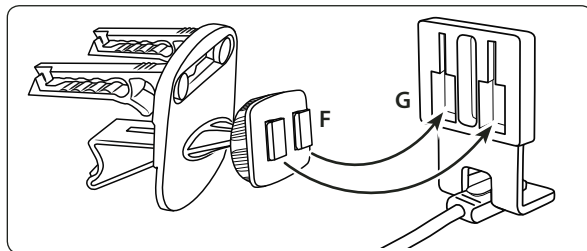

All brand names and product names are trademarks or registered trademarks of their respective owners.


Safety Precautions

Follow all manufacturer safety guidelines for operating your device. Failure to practice safe usage of GPS device while driving may result in damage, injury, or death. Do not install Arkon products over an air bag cover or within the air bag deployment zone.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.


Insertion of Mount Assembly into Air Vent

Step 1. Pinch the vent mounting clips (A) so that the teeth open and gently insert vent pedestal into vent louvres until the mounting clips are attached to the fin/blade of the vent. Adjust the support leg (H) vertically until it rests firmly along the bottom of the vent or dash surface below the vent.

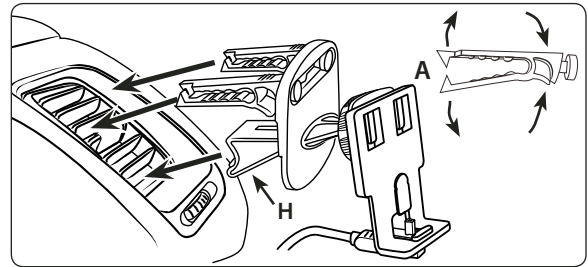


GPS Device Attachment

Step 1. With the air vent pedestal installed, attach the GPS device (not included, sold separately) by insert the adapter plate notch (I) into the vertical groove pattern (J) on the back of the GPS device (not included, sold separately).

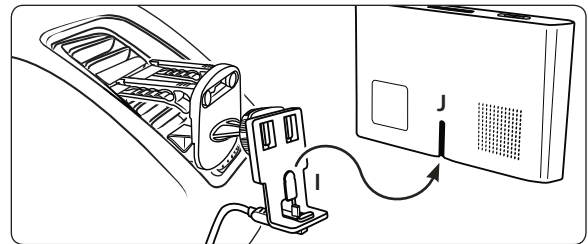

Dual-T Device Attachment

Step 1. If your Magellan device has dual-T slots on the back, insert the air vent mount as shown above. Attach the unit to the mount by connecting the dual T-slots (K) to the dual T-tabs of the mount (L).

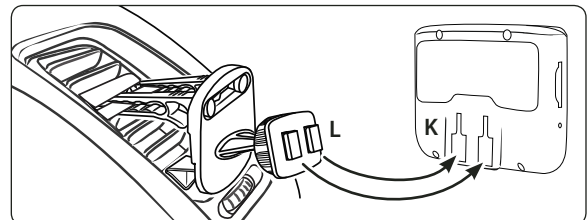

ARKON[®]
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan

© Copyright 2009 Arkon Resources, Inc.