

PTM112 | Mini Friction Dashboard Mount for Palm® Treo™

Patent Pending



Package Contents:

- (1) SM012 - Mini weighted friction dashboard mount
- (1) GN014-SBH - Swivel mini windshield mount
- (1) CC002-Palm - Palm Treo custom Holder
- (1) Optional adhesive safety hook (recommended but not required)
- (1) Alcohol cleaning pad

Compatible with the following devices:

- Palm Treo 650, 680, 700, and 750 Smartphones • HP iPAQ 6815 • HP iPAQ 6818 • HP iPAQ 6828 • HTC P3600
- XDA Atom Exec • Dopod 818 Pro • Dopod 810 • i-Mate JAMin • Samsung BlackJack • Mio PDA A701 • HTC Neo




Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

Dashboard Mount Installation




Step 1. Find a safe location on the vehicle dashboard that is not in an air bag deployment zone.



Step 2. **Optional Safety hook installation will add extra stability.** Clean the area with the included alcohol pad and let dry. Remove the adhesive backing on the safety hook base. The hook curve must point towards the windshield. Press and hold the hook down on dashboard surface for about a minute. Allow 24 hrs. to cure to the dashboard at room temperature (72° F).

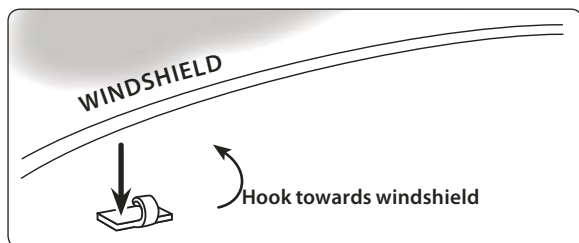


Step 3. Place the loop on the back of the dashboard mount around the safety hook and place on the dashboard in front of the hook. Remove the protective film from the pedestal mounting surface (A).

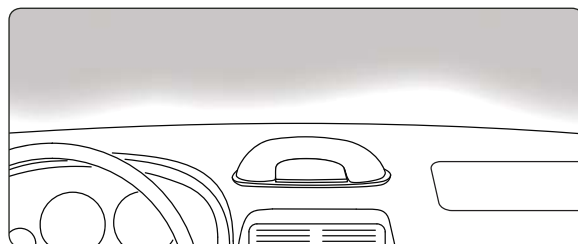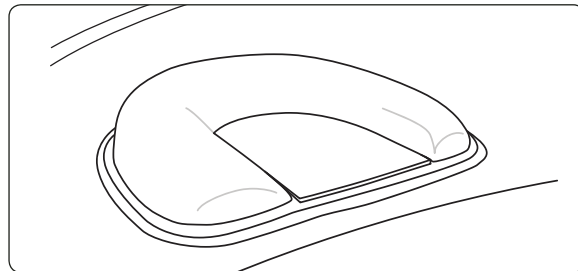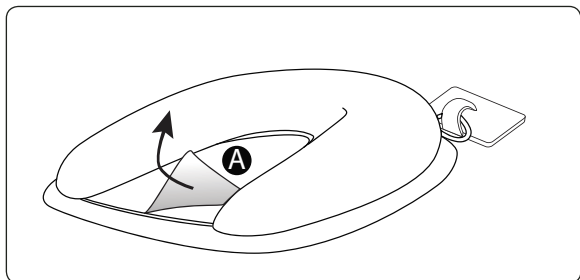

Dashboard Pedestal Installation

Step 1. Place the suction cup of the pedestal down on the mounting surface in the center of the dashboard mount with the lever up.

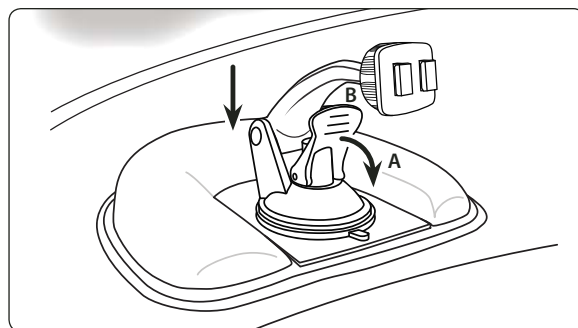

Step 2. Flip the locking lever (A) down to secure the pedestal to the dash mount. Adjust the angle of the pedestal arm by tightening the vertical adjustment knob (B).

Continued on other side...



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9am - 5pm, PST

www.arkon.com


Arcadia, CA 91006 USA

Designed in USA | Made in China & Taiwan

© Copyright 2010 Arkon Resources, Inc.

Custom Holder and Device Attachment

Step 1. Attach the holder to the dual T-tab head by inserting the T-tabs into the T-slots.

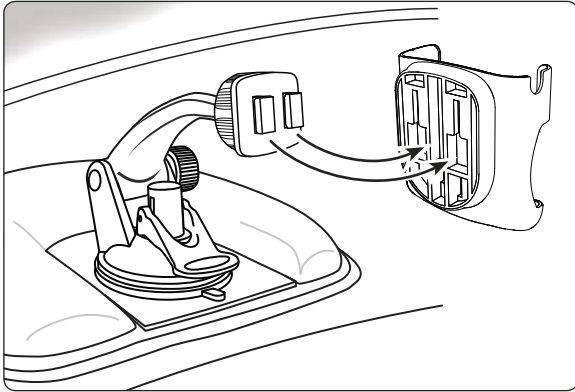

Step 2. Slide the Palm Treo or other compatible device into the holder and adjust pedestal head angle if needed.

All brand names and product names are trademarks or registered trademarks of their respective owners.



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC. *The Mobile Mounting Specialists™*

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China & Taiwan

© Copyright 2010 Arkon Resources, Inc.