

# SM210 & CM910 | Universal Windshield, Dash, Console and Vent PDA Mount

SM210



CM043-ST-2  
CM043-ST

CM047-S2  
CM047-S

SM020-2  
SM020

AP020

CM910




CM043-ST-2  
CM043-ST

CM047-S2  
CM047-S


CM090-2  
CM090

AP020

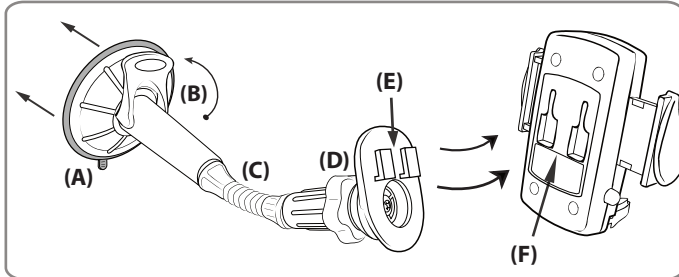


## Pedestal Instructions

- Step 1. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.
- Step 2. Adjust the angle of the pedestal head by using both hands to bend the gooseneck (C).
- Step 3. Adjust the angle and rotation of the pedestal head by loosening the swivel-tightening ring (D).
- Step 4. Attach the device cradle to the dual-T tab head (E) by inserting the T-tabs into the T-slots (F).

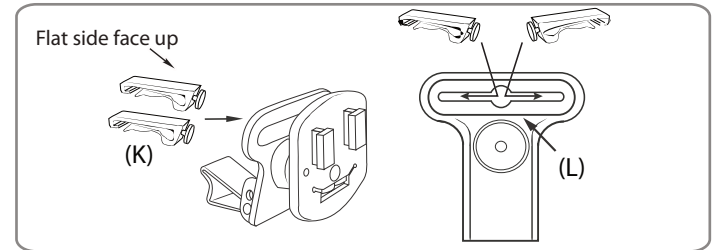


## Air Vent Pedestal Assembly

- Step 1. Attach the vent mounting clips (A) to the back of the pedestal (B) with the vent clips positioned with the flat sides facing up.

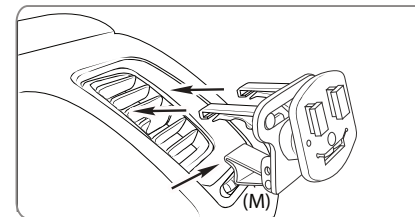


## Insertion of Pedestal into the Air Vent

- Step 1. Gently insert vent clips into vent louvres until the mounting clips are attached to the fin/blade of the vent. Adjust the support leg (M) vertically until it rests firmly along the bottom of the vent or dash surface below the vent.

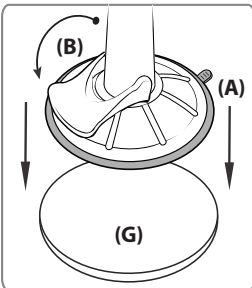


## Dash Installation

- Step 1. Locate a safe flat surface on the dash or console to mount the pedestal. Clean the dash with the alcohol pad provided. Let the dash surface dry before applying the adhesive disc (G).
- Step 2. Push the pedestal suction cup (A) firmly to the disc (G). Flip the lever (B) down to secure the suction cup.

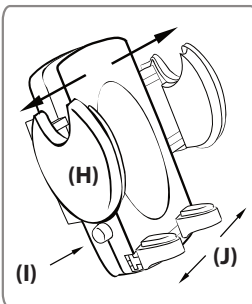

## Universal Cradle Instructions

- Step 1. If necessary, adjust the support legs (J) by sliding them laterally. These provide support for your device.
- Step 2. Place device on the support legs (J) and squeeze the side grip arms (H) until they fit securely to the device.
- Step 3. Push the release button (I) in order to release the device from the cradle.

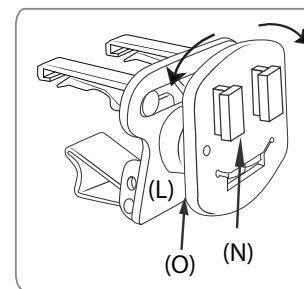

## Pedestal Adjustment

- Step 1. Adjust the swivel angle of the pedestal head by firmly holding the back of the pedestal (L), pulling out the pedestal head and twisting to the desired angle. Adjust the lateral angle of the pedestal head (N) by simply twisting the head on the pivot axis (O).



Use caution when adjusting the swivel movement to avoid damaging your air vents.



## Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.

**ARKON**  
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:  
(USA) (800) 841-0884  
(INT'L) (626) 254-9005  
Mon-Fri. 9am-5pm, PST

[www.arkon.com](http://www.arkon.com)  
Arcadia, CA 91006 USA  
Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.