




BT010

- Use with:
- BT GPS receivers
 - EZPass Carpool devices
 - Radar detectors
 - Other small portable electronics

Installation Instructions

- Step 1. Choose a location on your front or rear windshield to install the holder. Make sure this location does not obstruct your view of the road. Note: *If your vehicle has a heat reflective windshield you may want to choose a location on the windshield that isn't affected by the heat treatment. Sometimes the best location is up near the rear view mirror.*
- Step 2. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.
- Step 3. Adjust the holder platform to a level position.
- Step 4. Apply the hook and loop fastener tape or the metal plates as needed.

- If using with an external GPS antenna that has a built in magnet, then you need to affix the adhesive-backed metal plates to the holder platform.
- If using with a GPS Bluetooth receiver or other device without any magnet, then you should use the hook and loop fastener tape provided.

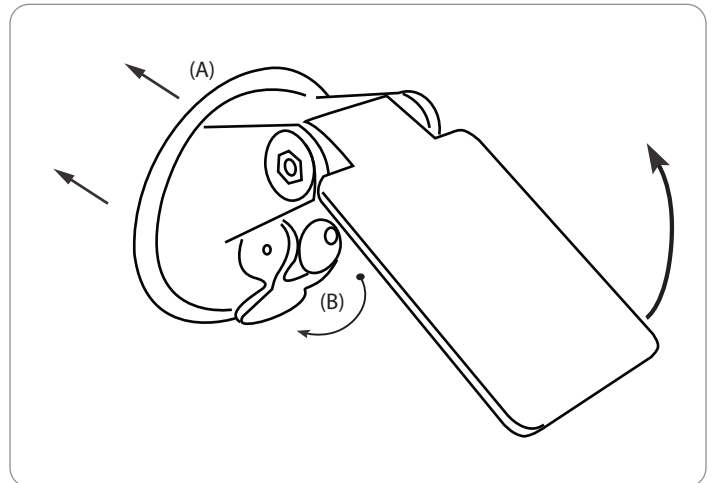

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:
(USA) (800) 841-0884
(INT'L) (626) 254-9005
Mon-Fri. 9am-5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Made in Taiwan
© Copyright 2015 Arkon Resources, Inc.