



**Package Contents:**


- (1) GN014-SBH - Deluxe Mini Windshield Suction Pedestal
- (1) GN047-SBH - Removable Air Vent Pedestal
- (1) SM040-2 - Mega Grip Universal Phone Holder
- (1) AP013 - Optional Adhesive Disk for Dashboard
- (1) Alcohol Cleaning Pad

No tools required for installation.

**!** Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

**Windshield Mounting**


- Step 1. Find a safe location on the interior of the vehicle's windshield to mount the pedestal. Firmly push the suction base (A) against the windshield and flip the base lever down (B) to the locked position. See diagram below.
- Step 2. Adjust the angle of the pedestal arm by tightening the angle adjustment knob (C) at the base to the desired angle.

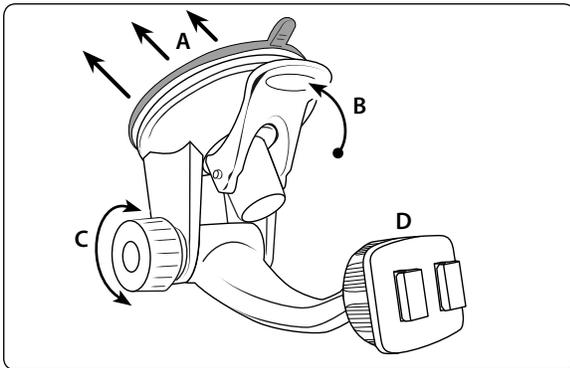

- Step 3. Adjust the angle and rotation of the pedestal head by loosening the swivel-tightening ring (D).


**Mega Grip Universal Holder Attachment**

- Step 1. Attach the Mega Grip holder to the Dual-T head by inserting the Dual T-Tabs (E) into the Dual T-Slots (F) on the back of the holder.

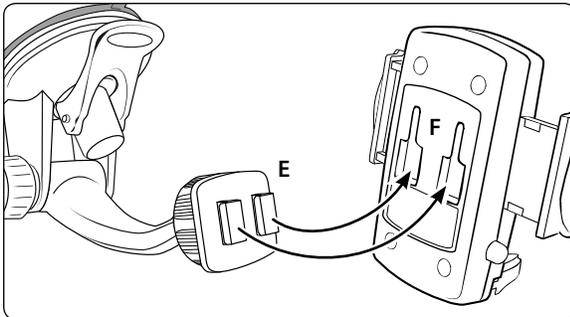


**Device Insertion and Removal from Mega Grip Holder**

- Step 1. Place the phone or device into the holder with the device sitting on the adjustable support legs (G). Clamp the grip arms (H) inward to firmly grasp the device. Press the release button (I) to open the arms.

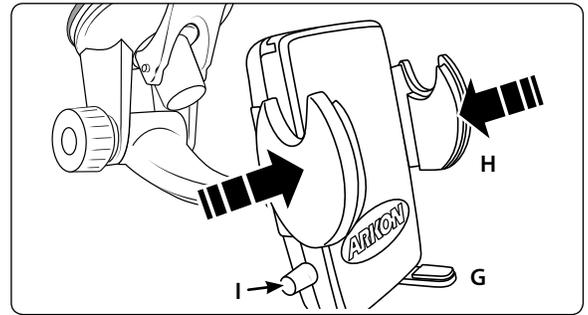

**Dashboard or Console Mounting (Optional)**

- Step 1. Find a safe location on the dashboard or console. Use the included alcohol pad to clean the mounting surface if necessary. Remove the paper backing on the adhesive disk and firmly press in place. Let cure for 24 hrs. before using.
- Step 2. Place the pedestal's suction base (J) over the center of the circular disk. While firmly holding the pedestal on top of the disk, flip the base lever down (K) to the locked position.

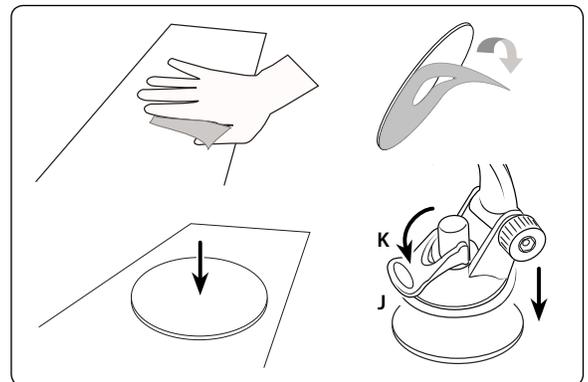


**!** **Safety Precautions**  
 Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.  
 Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.



Consumer Hotline: [www.arkon.com](http://www.arkon.com)  
 USA (800) 841-0884 Arcadia, CA 91006 USA  
 INT'L (626) 254-9005 Designed in USA | Made in Taiwan and China  
 Monday - Friday 9 am - 5 pm, PST © Copyright 2015 Arkon Resources, Inc.


### Air Vent Pedestal Assembly

Step 1. Attach the vent mounting clips (L) to the back of the pedestal (M) with the vent clips positioned with the flat sides facing up.

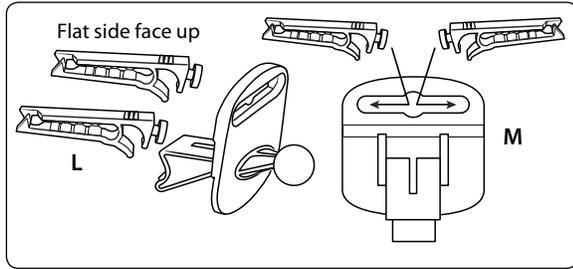


### Swivel Ball Head Assembly Attachment

Step 1. Slip the tightening ring (N) over the air vent pedestal ball. Snap the Dual-T head adapter plate (O) on to the mounting ball (P). Screw the tightening ring over the adapter plate until securely holding the plate. Swivel to adjust the angle of the Dual-T head.

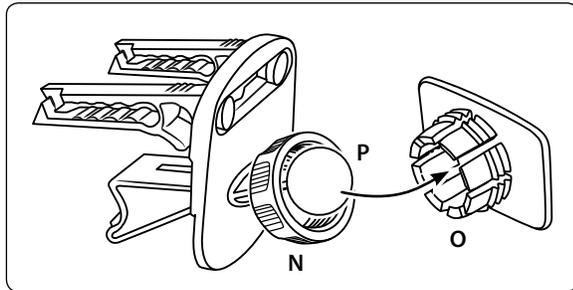


### Attach Mega Grip Holder to Air Vent Pedestal

Step 1. Attach the Mega Grip universal holder to the Dual-T head by inserting the Dual T-Tabs (Q) into the Dual T-Slots (R) on the back of the holder.

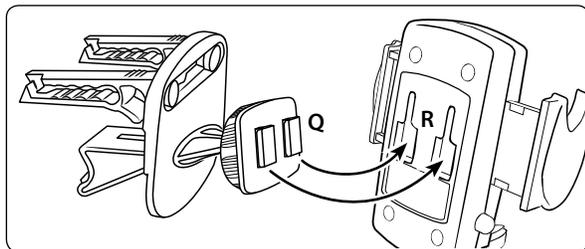


### Air Vent Mounting

Step 1. Pinch the vent mounting clips (L) so that the teeth open and gently insert vent pedestal into vent louvres until the mounting clips are attached to the fin/blade of the vent. Adjust the support leg (S) vertically until it rests firmly along the bottom of the vent or dashboard surface below the vent.

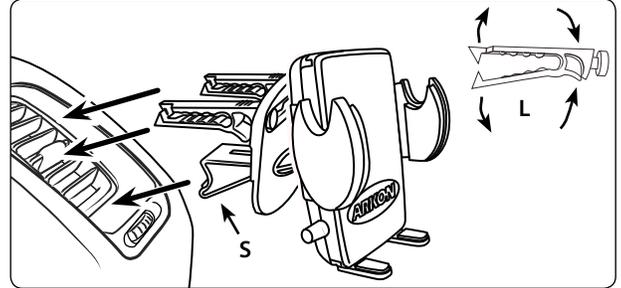


### Device Insertion and Removal from Mega Grip Holder

Step 1. Place the phone or device into the Mega Grip holder with the device sitting on the support legs (G). Clamp the grip arms (H) inward to firmly grasp the device. Press the release button (I) to open the arms.

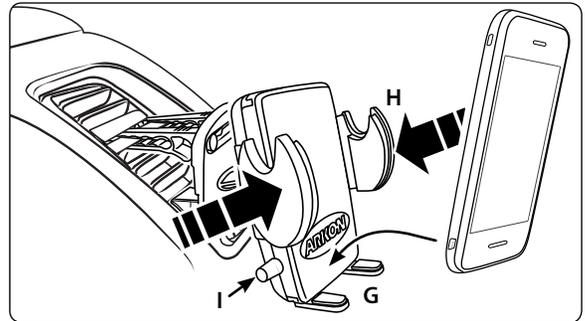

### Mega Grip Holder Adjustments

Step 1. If necessary, adjust the removable support legs by sliding them laterally on top or bottom of the holder. This will provide added support and stability for your device.

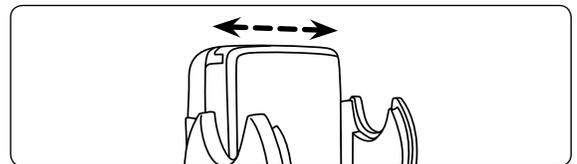

**!** Use caution when adjusting the swivel head. Use caution when inserting or removing the pedestal or the phone from the holder. Make sure that the teeth of the vent clips are open wide enough to not damage the vent fins / blades.

**!** **Safety Precautions**  
Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and /or air bag deployment.  
Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
**RESOURCES INC.** The Mobile Mounting Specialists™

Consumer Hotline: [www.arkon.com](http://www.arkon.com)  
USA (800) 841-0884 Arcadia, CA 91006 USA  
INT'L (626) 254-9005 Designed in USA | Made in Taiwan and China  
Monday - Friday 9 am - 5 pm, PST © Copyright 2015 Arkon Resources, Inc.